


12–98 Litho In U.S.A. (cre) 1 Part No. 881592

TOP AND CABINET PARTS

IIIus. No.	Part No.	DESCRIPTION
1	357213	Nut, Push-In (2)
2	3950280	, ()
2	62750	Spacer, Cabinet To Top (4)
5	63128	,
6	62780	Clip, Top & Cabinet & Rear Panel (2)
8	3356311	
11	3949239	Switch, Lid
13	3351355	
15	54584	Hinge, Lid (L.H.)
16	54583	
17	19119	Bumper, Lid Hinge
18	21258	Bearing, Lid Hinge (2)
19	3361398	Lid
20	358684	Strike, Lid Switch
22	9724509	Bumper, Lid (2)
28	3356311	Screw, 6-20 x 1 (2)

CONTROLS AND REAR PANEL PARTS

For Model: RAB4132HQ0 (White)

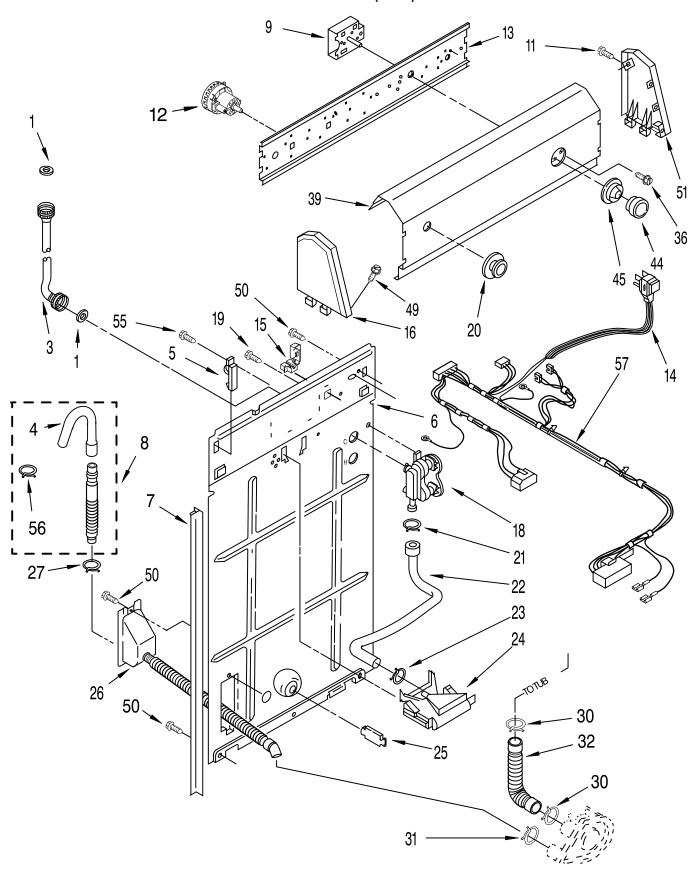

CONTROL AND REAR PANEL PARTS

Illus.	Part		Illus.	Part		Illus.	Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	16123	Washer, Water	11	90767	Screw, 8A x 3/8	30	3363366	Clamp, Hose
		Inlet Hose (4)	12		Switch, Water Level	31		Clamp, Hose
		(1–1/16 x 5/8)	13		Bracket, Control	32		Hose, Pump To Tub
3		Hose, Water	14		Cord, Power	36		Screw, Timer
		Inlet	15		Strain Relief,		00.00	Mounting
	3949368	(Blue Coupler)	'0	00 10 100	Power Cord			(10–32 x 1) (2)
	3949369		16	3358015	Cap, End (L.H.)	39	3949727	Panel, Console
4		Nozzle-Drain	18		Valve, Water	44		Knob, Timer
		Hose	'	0002101	Mixing	45		Dial, Timer
5	387402	Hinge, Console (2)	19	90864	Screw,	49		Screw 8–18 x 1.25
6		Panel, Rear	'	0000.	10-24 x 3/8 (2)			(Panel to Top)
7		Pad, Rear Panel	20	3398390	Knob, Control	50	62863	Screw, 10-16 x 3/8
8		Hose, Drain	21	370451		51		Cap, End (R.H.)
		(4 ft.)	22		Hose, Vacuum	55	3357011	
	661577			0_00_	Break			10-16 x 1/2
		(9 ft.)	23	371503	Clamp, Hose	56	3366913	Clamp, Drain Hose
		(Not Included)	24		Break, Vacuum	57		Harness, Wiring
	3357090		25		Support, Rear			(For Detail See
		Drain Hose			Panel			Page 9 & 10)
		(21 Inches.)	26	3361805	Hose-Corrugated			Also See Clips
		(Not Included.)		330.333	Assy.			
9	3946451	Timer, Control	27	3366912	Clamp, Hose			
		(60 Hz.)			- ·-···· p , · · · · · · · ·			
		(Motor Not A						
		Service Part)						

AGITATOR, BASKET AND TUB PARTS

For Model: RAB4132HQ0 (White)


AGITATOR, BASKET AND TUB PARTS

Illus. No.	Part No.	DESCRIPTION
1	3355758	Cap, Agitator
2	358237	Screw & Washer
4	63235	(5–16–24 x 1) Agitator, Assy.
5	3360611	Tub Ring & Gasket
6	3359586	Gasket, Tub Ring
7	387868	Balance Ring
8	387867	Clip, Balance
		Ring (8)
12	21366	Nut, Spanner
13	8271639	Basket
14	3952746	Filter, Plate
16	63125	
17	389140	Block, Basket
		Drive
18	383727	Gasket, Centerpost
19	3347780	Hose, Pressure Switch

BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS For Model: RAB4132HQ0 (White)


			(White)			
@	Illus.	Part	•	Illus.	Part	
	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
	1		Brake & Drive	11		Plate, Motor
			Tube (Complete) (Refer to Page 11			Mount To Gearcase
1 7	2	63292	For Further Breakdown) Washer, Spin	12 13		Grommet, Motor (4) Coupling, Motor And Isolation (2)
	3		Tube Thrust Ring, Spin	14		Screw (2) #10-16 x 5/8
2	4	62202	Tube Support Ring, Retainer	15 16	3946532 3357334	Shield, Motor
3	5	2051211	Clutch (Complete)	17		
4	6	3951311	Band & Lining,	18	3362089	Retainer, Motor (2) Shield, Tub
4	ŭ	0001000	Clutch (Includes Illus. 7 & 8)	19		To Motor Motor, Main
5	7	62646	Cap, Clutch Spring (2)	20		Drive Switch, Main
	8		Spring, Clutch (Not Serviced)	21	62700	Drive Motor Retainer, Pump (2)
	9	3360630		22		Pump (Complete)
	3	3300030	(Complete)	23	3355454	Clip.
16 8 23			(Refer To Page 12 For Further	24		Anti–Rattle Screw,
·			Breakdown)			10–16 x 3/8
	10	3357334	Screw, Gearcase To Base (3)	25 26		Clamp, Capacitor Capacitor, Start
9 10 11/12 13 15	16		24 26 25 19 17 14		18 14 17 20	

MACHINE BASE PARTS

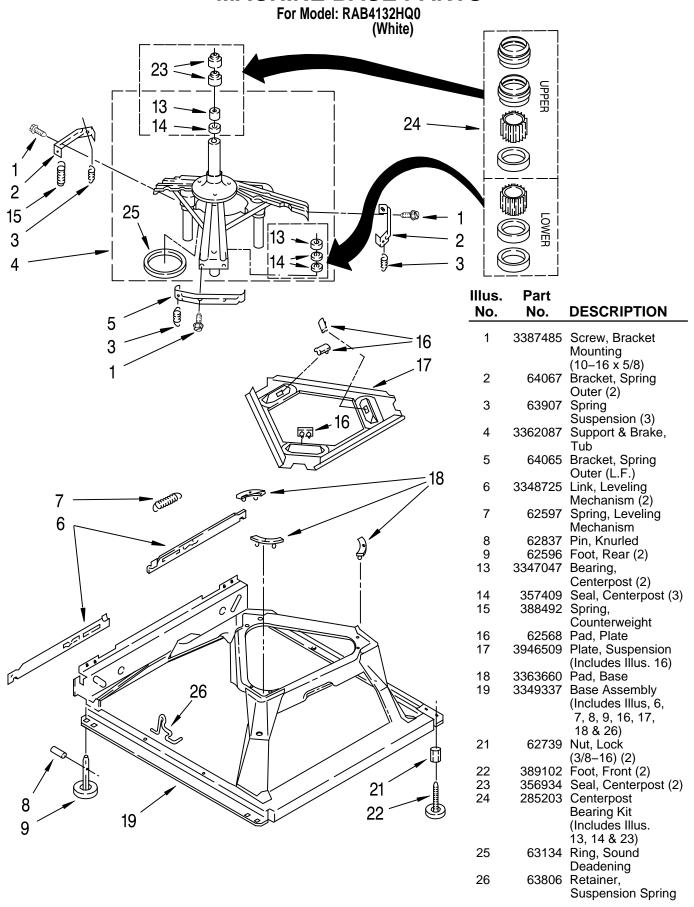

WIRING HARNESS PARTS

For Model: RAB4132HQ0 (White)

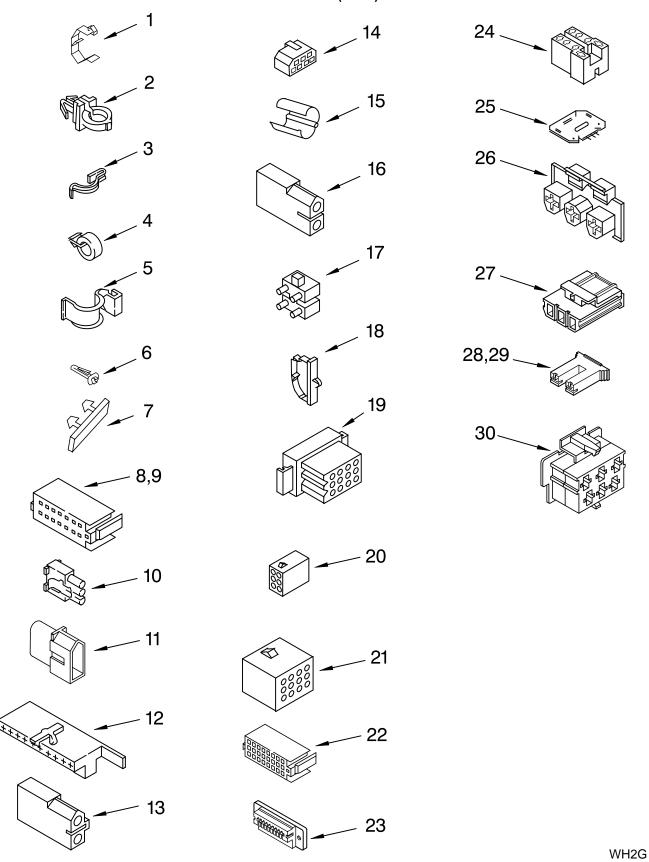

WIRING HARNESS PARTS


For Model: RAB4132HQ0 (White)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1 2 3 4 5 6 7 8	388498 3347812 3352501 90016 3390496 389379 352090	(Suds Models) Timer, Block Disconnect (White)	13 14 15 16	3347243 63523 717252	Block, Disconnect (Motor 3 Speed) (Use Term. 94613 Or 94614.) Block, Disconnect (Use Term. 352088) Protector Connector (2–Way) (Use Term.94614) Plug, Terminal	23 24 25 26 27	60687 3407125	(3–Circuit)
9	352089	Timer, Block Disconnect (Black)			(4-Way) (Power Cord) (Use M3 Screws)			(Pressure Switch) (Use Term.3948619 OR 3948620.)
10	62889	Receptacle, Terminal (3–Way) (Lid Switch) (Use Term.94613) Or 94614.)	18 19 20		Clip, Harness Block, Disconnect (12–Way) (Timer) (Use Term. 94613) Receptacle	28 29	3354925 3354926	Block, Connector (Cold Valve) (Use Term.693217)
11	353424	Plug, Terminal (3–Way) (Power Cord) (Use Term.94613)	21		(6–Way) (Use Term. 94613) Plug, Terminal (12–Way)	30	3948615	Connector (T.P.A.) (6–Circuit) (Temp. Switch) (Use Term.3948619
12	62505	Block, Disconnect (Motor 2 Speed) (Use Term.352088)	22	3369366	(Use Term. 94613 Or 94614.) Timer, Block Disconnect (Black) (Amp) (Use Term. 3369365)			OR 3948620.)

FOR COMPLETE WIRING HARNESS REFER TO CONTROL AND REAR PANEL PARTS PAGE

BRAKE AND DRIVE TUBE PARTS

For Model: RAB4132HQ0 (White)

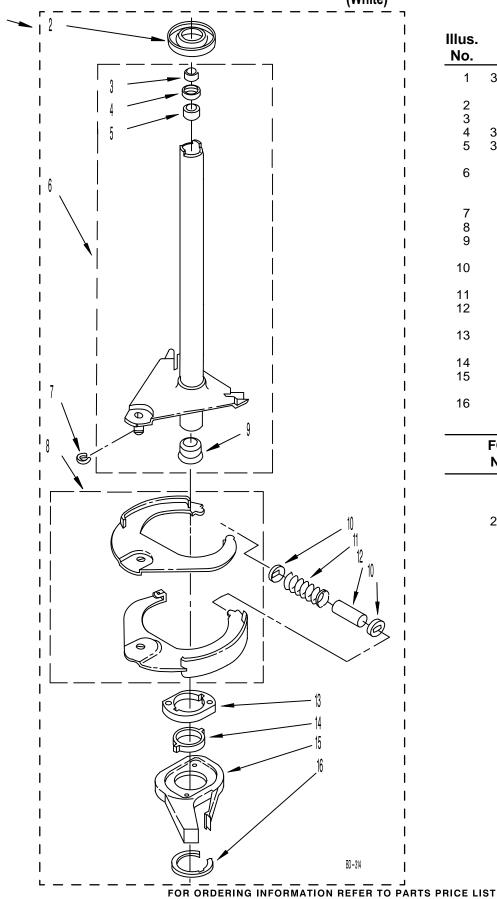


Illus. No.	Part No.	DESCRIPTION
1	388951	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
2 3 4	91939	Seal, Oil
4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Brake Shoe
9	62703	"T" Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	62647	Spring (2)
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake Cam
16	90368	Ring, Retaining

FOLLOWING PARTS NOT ILLUSTRATED


Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin) 285208


GEARCASE PARTS

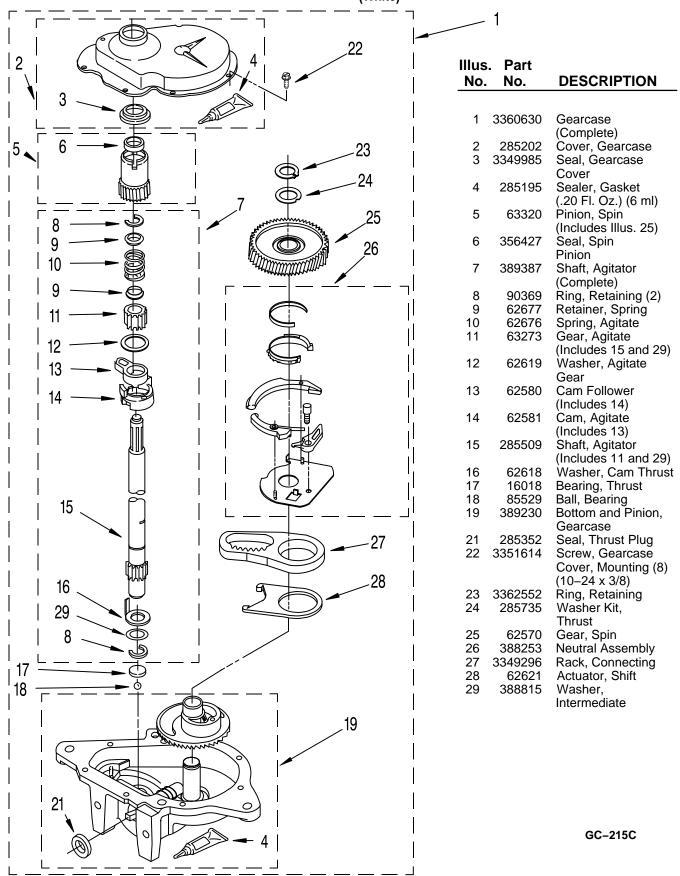

WATER SYSTEM PARTS

For Model: RAB4132HQ0 (White)

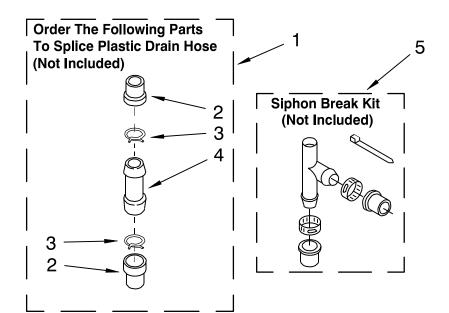

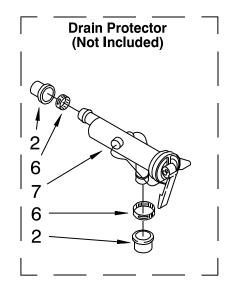


WS400

Illus. No.	Part No.	DESCRIPTION
1	285442	Connector Kit, Plastic Drain Hose
2	285321	Sleeve Kit, (Contains 2 Sleeves)
3	370447	Clamp, Hose
4	16272	Connector, Straight
5	285320	Siphon Break Kit (Not Included)
6	65349	Clamp, Hose
7	367031	Drain Protector (Not Included)

MISCELLANEOUS PARTS

For Model: RAB4132HQ0 (White)

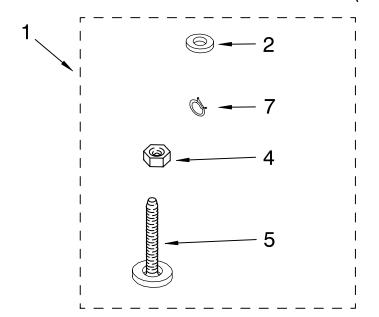

Illus. No.	Part No.	DESCRIPTION
1	3976251	Miscellaneous Parts Bag
2	16123	Washer, Inlet Hose
4	62739	(1–1/16 x 5/8) (4) Nut, Lock (2) (3/8–16)
5	389102	Foot, Front (2)
7		Clamp, Hose

LITERATURE AND OPTIONAL PARTS

Illus. Part No. No. DESCRIPTION

LITERATURE PARTS

LIT3952817 Installation Instructions LIT3980314 Guide, Use and Care LIT3953316 Energy Guide LIT3951023 Label, Wiring Diagram Illus. Part
No. No. DESCRIPTION | Illus. Part
No. No. DESCRIPTION

OPTIONAL PARTS NOT INCLUDED

PAINT, TOUCH-UP (1/2oz.)

72017 White 72107 Almond 72110 Golden Harvest

PAINT, PRESSURIZED SPRAY (13 oz.)

350938 Primer, Gray 350930 White 350956 Almond 261890 Golden Harvest

PAINT, BULK (1 qt.)

799344 White (Uncut) 978883 Almond (Uncut) 261891 Golden Harvest (Uncut)

OIL

350572 Oil, Gearcase (16 Oz.)

LUBRICANT

285208 Lubricant (Use Only in Brake Shoe Assembly On Roller and Pin)

SEALER

285195 Sealer, Gasket (.20 Fl. Oz.) (6 ml)

SHIPPING KIT

3348675 Shipping Kit

ACCESSORY PARTS

367031 Drain Protector 89121 Stand-Pipe Kit 285320 Siphon Break Kit